



TPMS



Gussin TPMS Relearn Procedure A0059

Sensor Relearn Procedure with a scan tool

OBd dongle is not required

Confirm TPMS sensors are properly installed

Adjust tire pressures to placard value SE and SEL Models

Press MENU on right side of steering wheel to select Settings

Press down arrow to Tire pressure. Press OK

Scroll to Store. Press OK

Scroll to Confirm. Press OK

Tire pressure Stored S Model

Use rocker switch, press and hold your Menu

Select Settings, press RESET

Select Tire pressure, press RESET

Select Confirm, press RESET

Tire Pressure Stored